


Adept
Industrial
Solutions
Pty Limited

E-A-R™ Flexible Fit Earplug

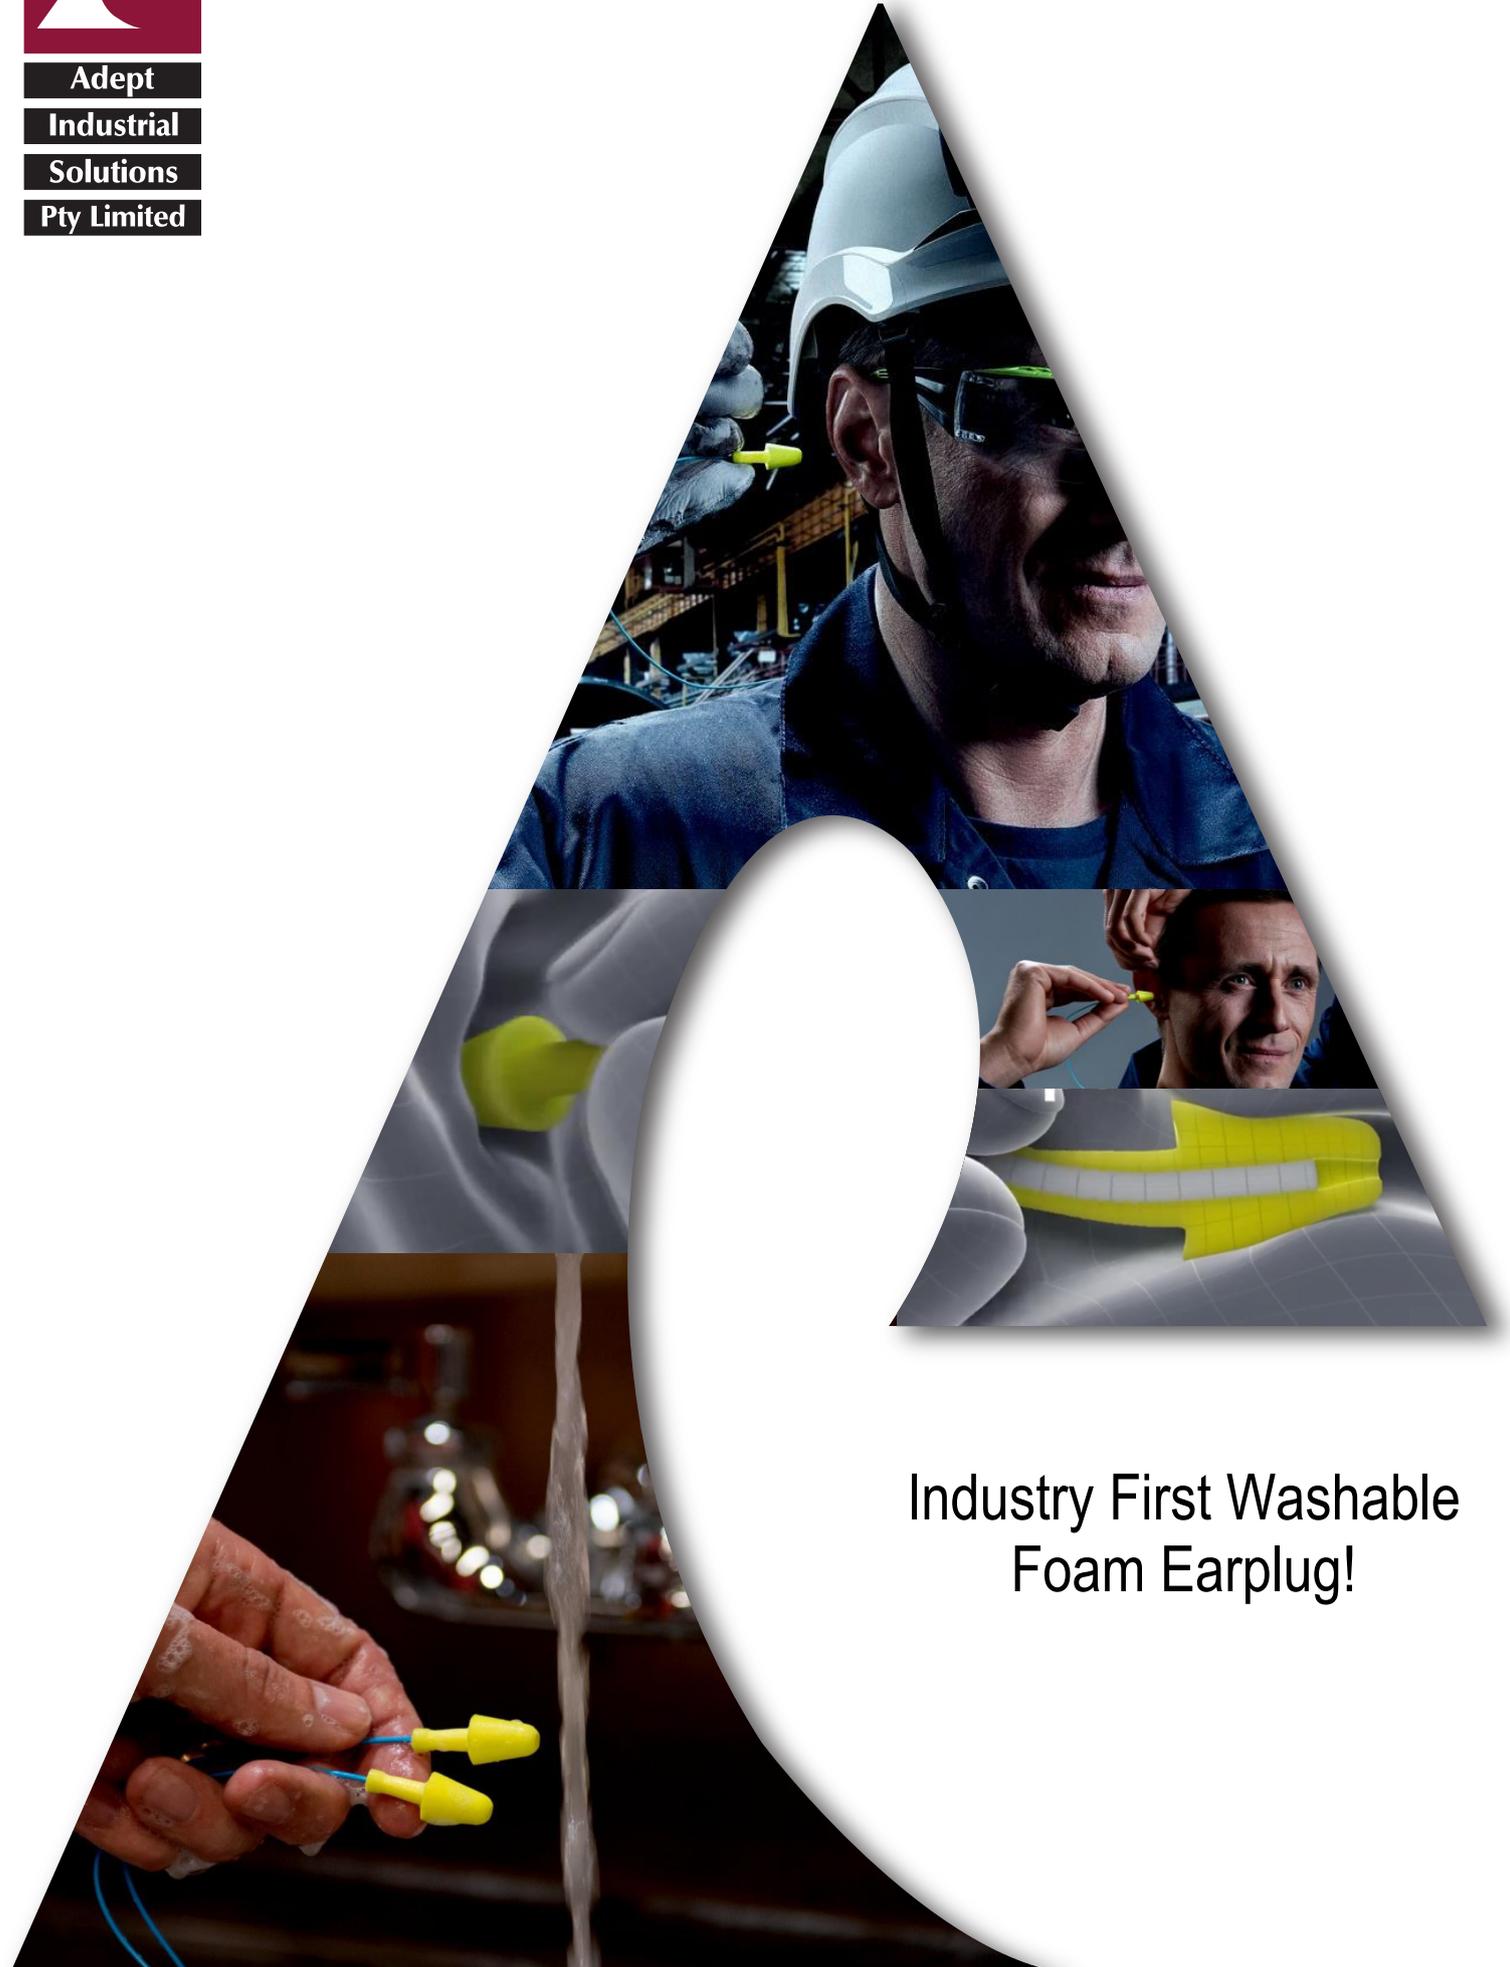

Industry First Washable
Foam Earplug!

3M™ First Generation Push-to-Fit Earplugs



3M™ E-A-R™ Express™ Pod Plugs™	3M™ E-A-R™ Push-Ins™	3M™ No Touch™	3M™ E-A-R™ Push-Ins™ with Grip Rings	3M™ Skull Screws™
<p>The unique cap shape of foam ear tip compresses when going into the ear canal and slowly expands to fit.</p>	<p>The E-A-R form™ foam ear tip has a smooth surface to help ear tip slide easily into ear canal.</p>	<p>Smaller ultra soft cone shaped foam ear tip may fit some ear canals better.</p>	<p>Ultra soft cone shaped foam has patented grip rings.</p>	<p>Ultra soft foam conical ear tip has helical raised ribs (screw threads). The unique design appeals to some users.</p>


3M™ E-A-R™ Flexible Fit Next Generation Push-to-Fit Technology

Includes the great features of the first generation push-to-fit earplugs:

- Stiff, yet flexible fitting stem to guide the soft foam ear tip into the ear canal.
- The foam tip does not need to be rolled down, helping to keep the tip cleaner longer.
- The earplug can be inserted with gloved or dirty hands.

PLUS

- The 3M™ E-A-R™ Flexible Fit Earplug has a patented foam formulation which makes the earplug fully washable and reusable for up to two weeks.
- The option of using a one-hand insertion method (16dB Class 2) or the traditional two-hand insertion method (20dB Class 3)*.
- Durable foam construction, earplugs are encapsulated in the same material.

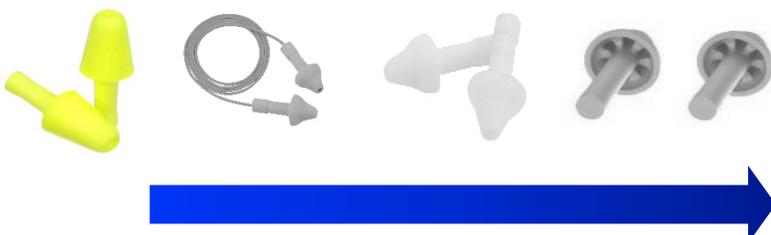


*3M strongly recommends fit testing of hearing protectors. Research suggests that many users will receive less noise reduction than indicated due to variation in hearing protector fit, fitting, and motivation of the user. 3M recommends that it be reduced by 50% or in accordance with applicable regulations.

3M™ E-A-R™ Flexible Fit Earplugs

Washable Foam

- First washable foam earplug.
- Simple to clean with mild soap and water for repeat usage.

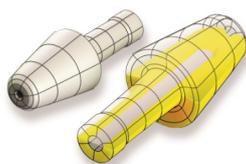

New Patented Foam Design

- The 3M™ E-A-R™ Flexible Fit Earplug has a patented foam formulation which makes the earplug fully washable for up to 2 weeks.

Comfortable Foam

- Foam is considered one of the most comfortable materials for earplugs.



No Roll Down

- Easy, quick insertion with no roll down.
- Helps keep the conical foam tip clean.
- Great for glove wearers or dirty environments.

New Single-Hand insertion Claim

- First to claim SLC80 with single hand insertion (16dB class 2).
- Also has two handed insertion (20dB class 3).



Corded or Uncorded

- Available with or without cord.




Innovation meets comfort

New Patented Design

- Patented design and innovative thermoplastic materials makes Flexible Fit one of 3M's most versatile and durable push-to-fit earplugs.

Comfort Fit

- Contoured foam tips provides comfort when worn over long periods.
- Ergonomically designed flexible stem provides a snug fit.

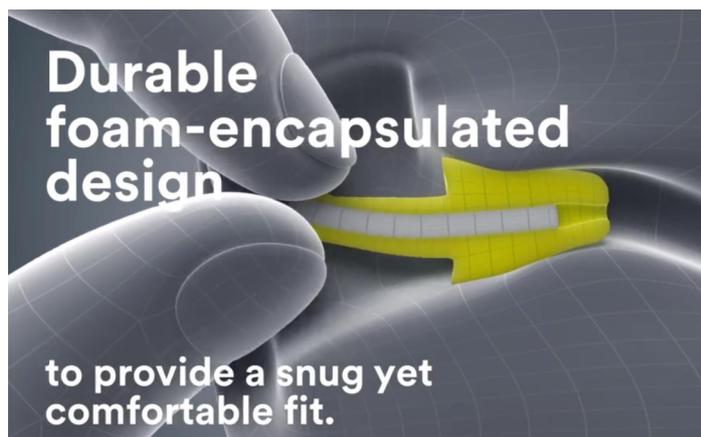

An industry first – First Washable Foam Earplug

- The 3M™ E-A-R™ Flexible Fit Earplug is the first of its kind to be washable in a foam earplug variant.
- Best of both worlds, comfort of a foam plug with multiple use and washability like a reusable.
- Patented foam formulation which makes the earplug fully washable and reusable for up to two weeks.
- Simply gently wash with mild soap and water for repeat usage. Suitable for repeated wear, offers great value to users.



An industry first – New Single-Hand Insertion Claim


- A new, one-hand insertion method is offered in addition to the traditional two-hand method. Both methods carry their own attenuation rating.
- 3M is not changing how push-to-fit earplugs have traditionally been inserted. We are only adding a new option.
- First in the market to claim SLC80 with single hand insertion (16dB class2).
- Also has the traditional two-handed insertion (20dB class 3).



Methods for Inserting 3M™ E-A-R™ Flexible Fit Earplugs

New One-Hand Method For 3M™ E-A-R™ Flexible Fit Earplug-First with a one-hand insertion claim.


- INSERT rounded ear tip into ear canal while holding stem with thumb and finger. (Fig. 1)
- HOLD PRESSURE on stem for a few seconds WHILE INSERTING. If needed, push stem from a different direction to make insertion easier. (Fig. 2)
- The entire ear tip should be inside the ear canal.

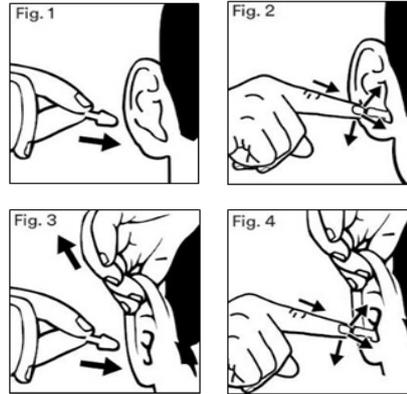

Two-Hand Method

- INSERT rounded ear tip into ear canal WHILE PULLING ear outward and upward with opposite hand. (Fig. 3)
- HOLD PRESSURE on stem for a few seconds WHILE INSERTING. If needed, push stem from a different direction to make insertion easier. (Fig. 4)

EARfit Validation Compatible

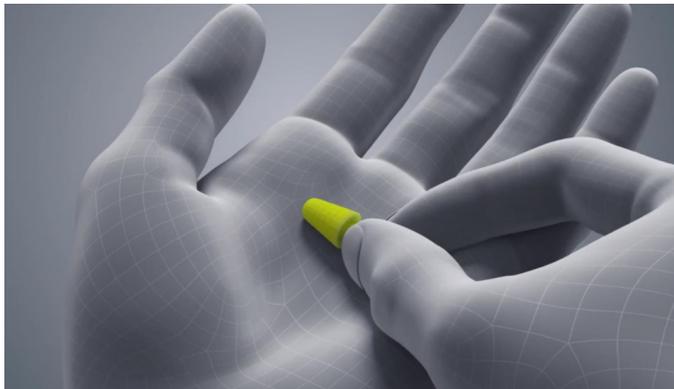

- Although the two-hand fitting method carries a higher attenuation rating, it is not a precise indicator of the attenuation individuals will achieve. This is due to variation in ear canal size, shape, and fitting skill.
- That is why 3M recommends individual fit testing of hearing protectors to validate the level of attenuation individuals can get from a particular hearing protector (Personal Attenuation Rating).

Product	3M ID	Code
E.A.R™ Flexible Fit Probed Test Plug	70071732690	393-2026-50

Who are our flexible fit users?

- Workers who wear gloves in their daily work, or those working in dirty environments.
- Users who want the comfort of a foam plug as well as the value of multiple use and washability like a reusable.
- Workers who do not need to be over attenuated - being able to stay protected while staying aware of their surroundings.
- Workers who may need to wear earplugs for longer periods and may value comfort first.
- Users who are only able to use one hand, to have ease and convenience to insert the earplug.
- Recommended industries include Construction, Transportation, Manufacturing, Welding, Utilities.



3M™ E-A-R™ Flexible Fit SKUs & Pricing

Product	3M ID	Code	
E.A.R™ Flexible Fit Corded Earplugs in Polybag	70071732690	328-1001	100 pairs per box, 4 boxes per case
E.A.R™ Flexible Fit Uncorded Earplugs in Polybag	70071732245	328-1000	100 pairs per box, 4 boxes per case

328-1001



328-1000



Product	3M ID	Code
E.A.R™ Flexible Fit Probed Test Plug	70071732690	393-2026-50

3M™ E-A-R™ Flexible Fit Earplugs

Breakthrough Innovations

- Industry first washable foam earplug and the first earplug with one-hand insertion claim.

Comfort Fit


- Big focus on comfort, with its patented new foam encapsulated design and ergonomic flex fit stem

One Hand Insertion Claim

- First in the market to claim SLC80 with single hand insertion, perfect for users who do not need over attenuation.

EARfit Compatible

- The new 1hand insertion claim is a great way to start the conversation around proper fit and PAR, as the flexible fit is EARfit compatible.

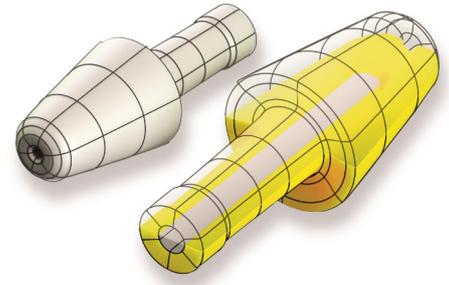

Please feel free to enquire with Kieran or Adel at Adept Industrial Solutions on 1800 008 590.

Freecall: 1800 008 590
www.adept-industrial.com.au
sales@adept-industrial.com.au

